





Defender Tdci 2.4/2.2 & TD5 Uprated intercooler fitting guide - vehicles with AC

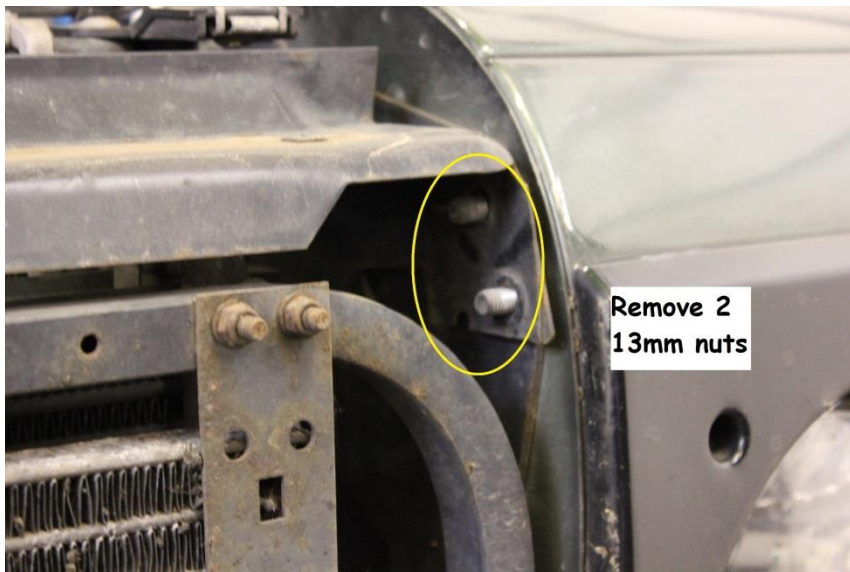

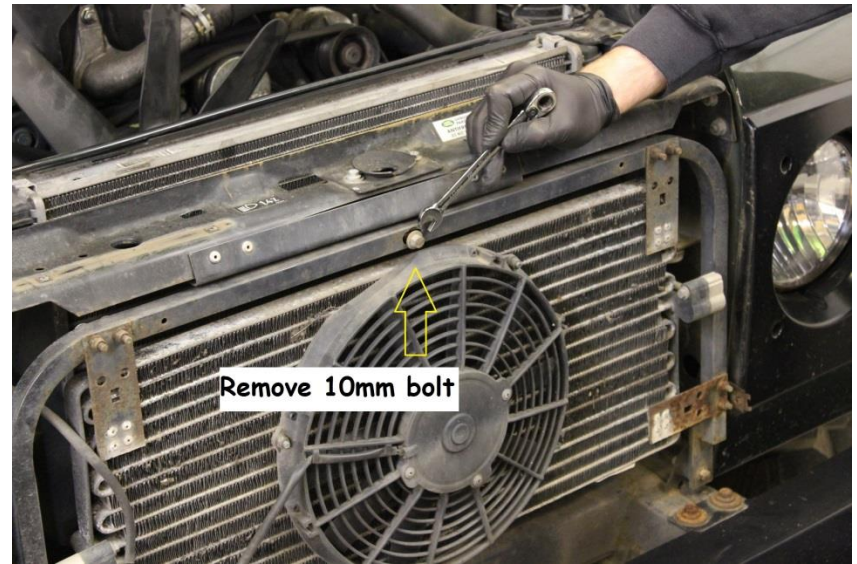


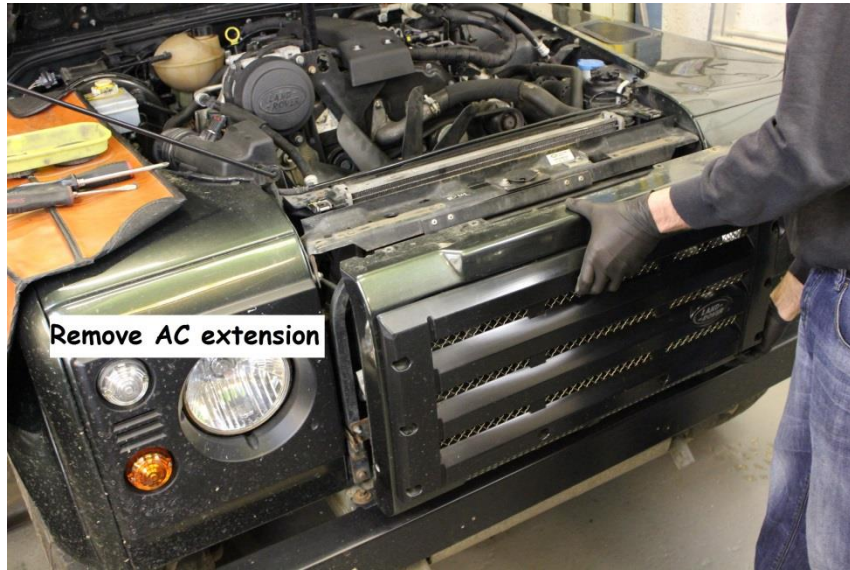

This is one of the studs removed

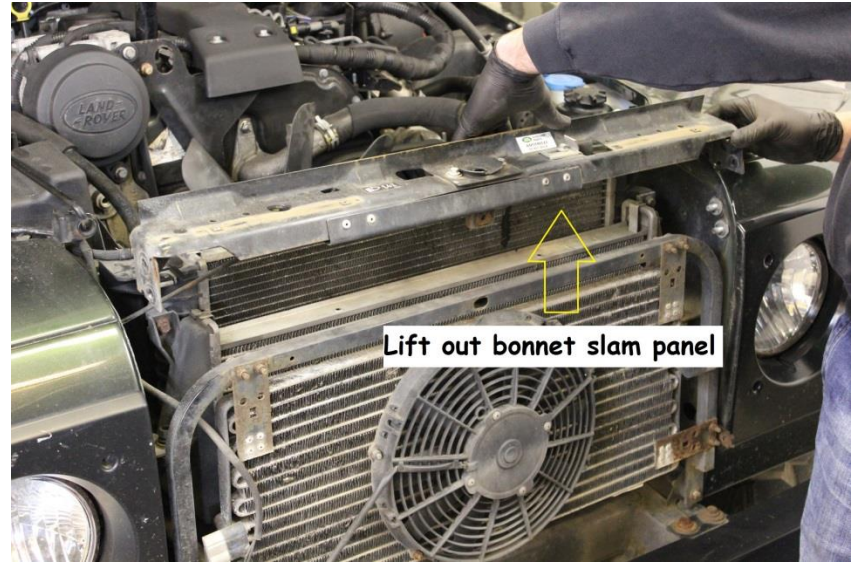


Lift out bonnet slam panel

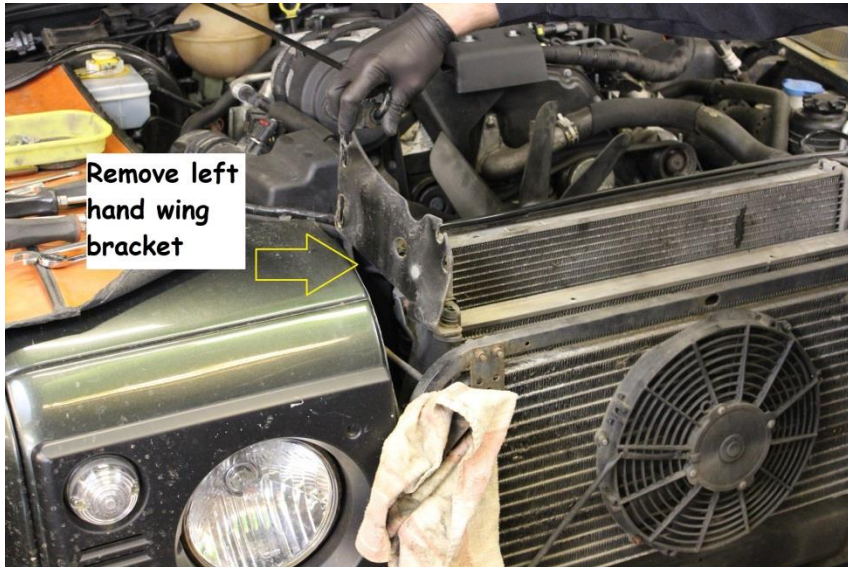


Remove left hand wing bracket




Remove right hand bracket

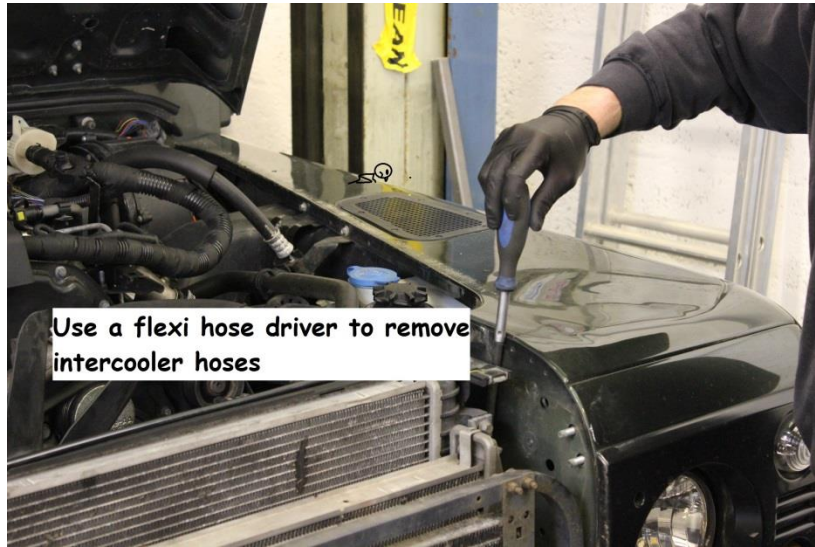


Use a flexi hose driver to remove intercooler hoses

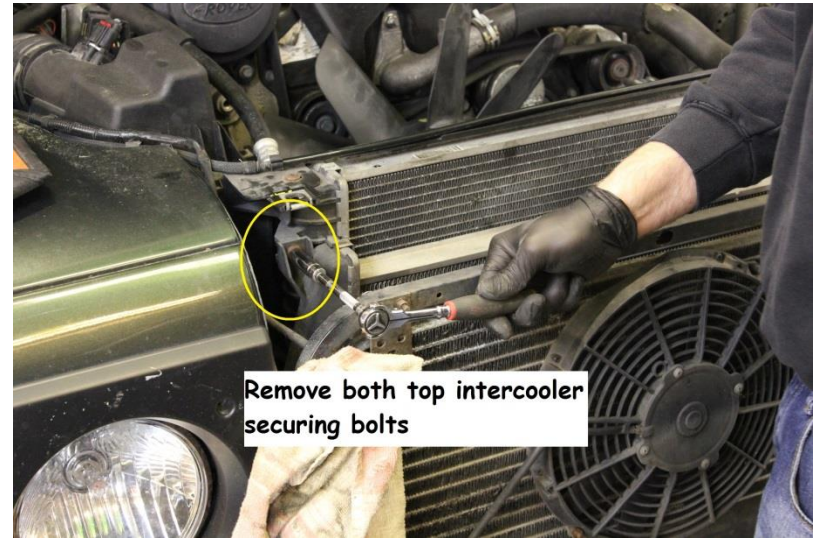



Remove both top intercooler securing bolts


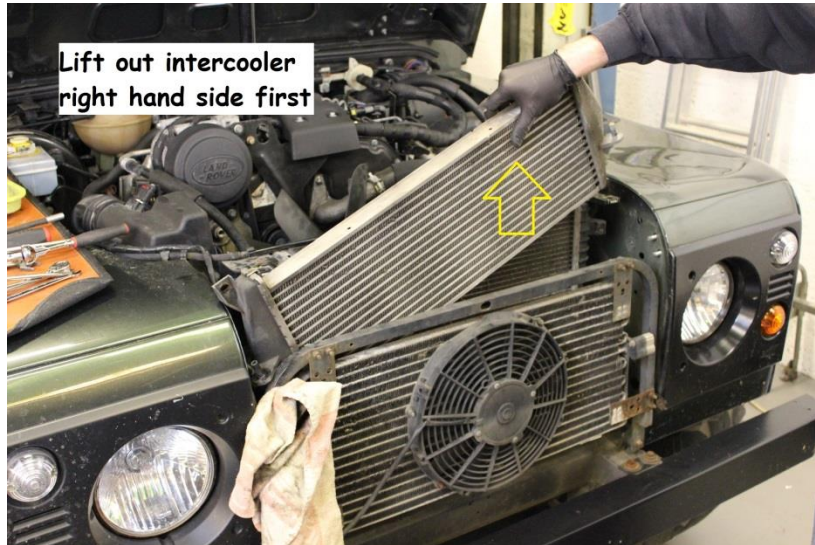


Lift out intercooler right hand side first

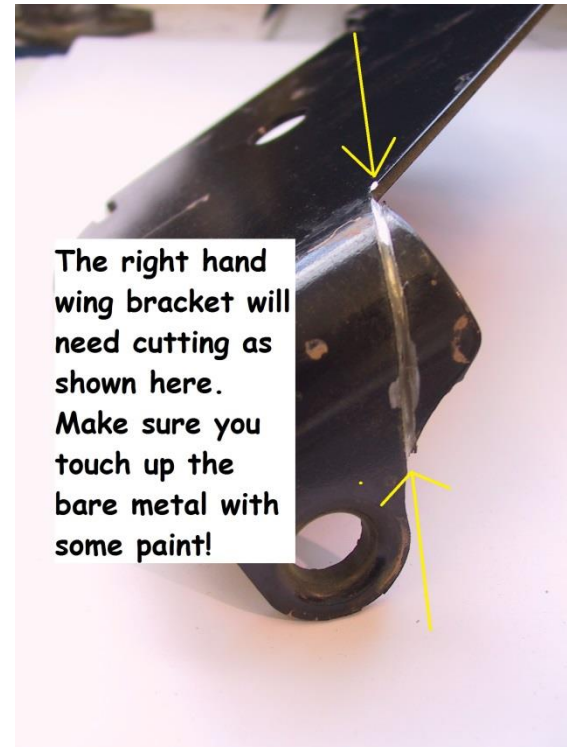

The right hand wing bracket will need cutting as shown here. Make sure you touch up the bare metal with some paint!

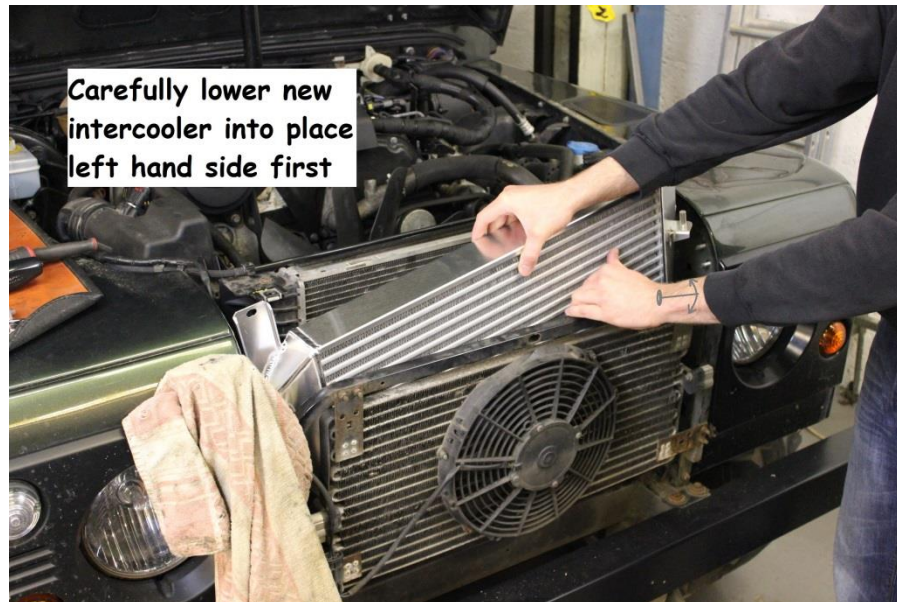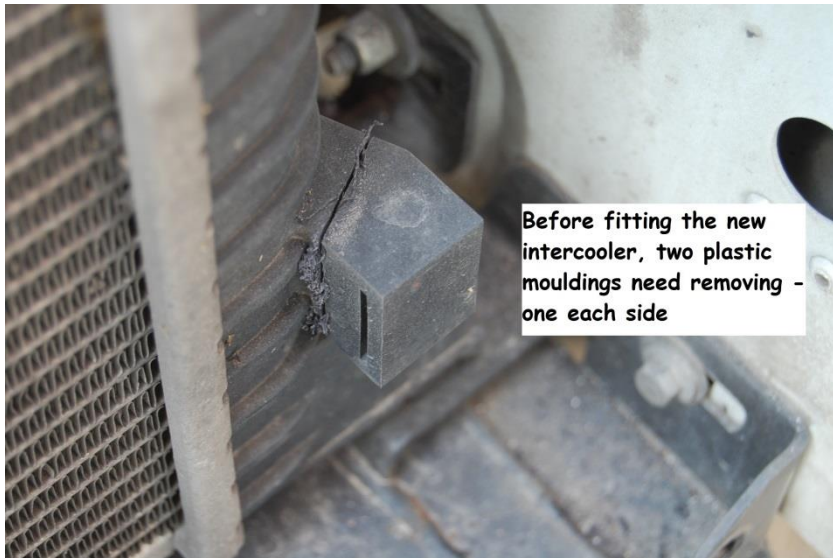

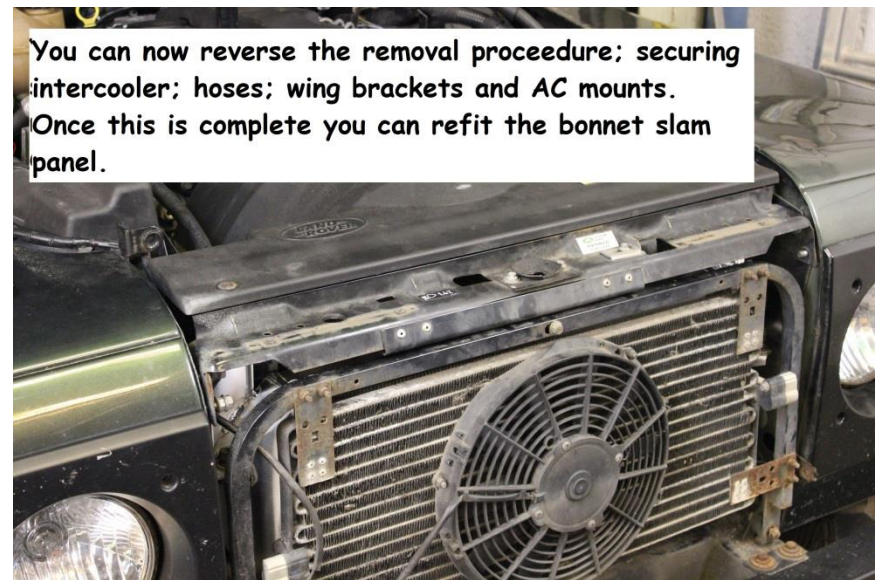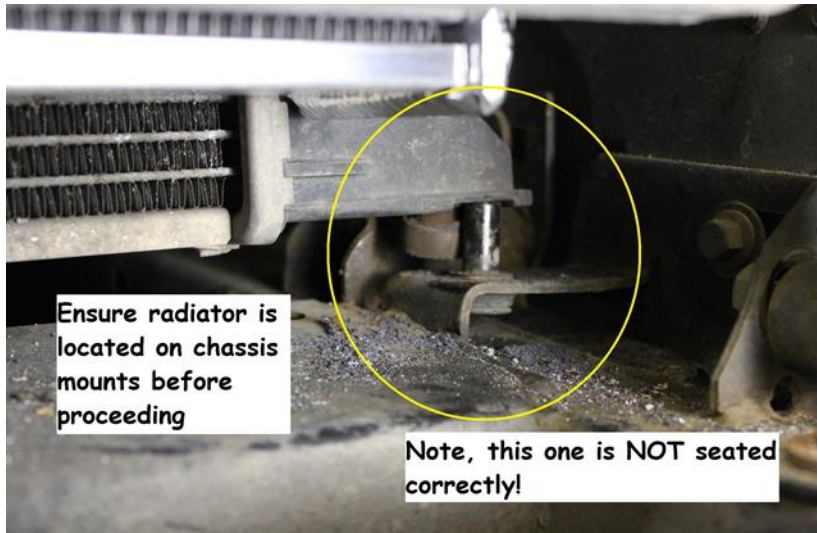



Hopefully your car will look something like this!

When you are satisfied everything is tightened up and secure, you can carefully make sure the bonnet closes securely. Take the vehicle for a test drive before undertaking a long journey!